

# DALJINSKI UPRAVLJAČI

Indikator aktivnosti:

- STB – svijetli u slučaju kada upravljamo Extra TV uređajem
- TV – svijetli kada upravljamo televizorom

Tasteri za izbor kanala

Korak nazad/brisanje unijetih informacija

Pojačavanje/smanjivanje tona

Potvrda/unos odabranog

Ulazak u meni Extra TV uređaja

Korak nazad

Izlazak iz menija

Informacije o programu

Stop

Pusti/pauziraj

Premotavanje naprijed i nazad

po 7 sekundi

Prečice do Extra TV opcija

Gašenje tona

Teletext

Uključi/isključi

Podešavanje širine slike

Listanje kanala

Navigacioni tasteri

Programski vodič

Videoteka

Vraćanje na prethodni kanal

Snimljene emisije


Snimanje

Premotavanje unaprijed i unazad

Izmjena načina rada daljinskog

(prebacivanje u TV mod)

Podešavanje opcija gledanja

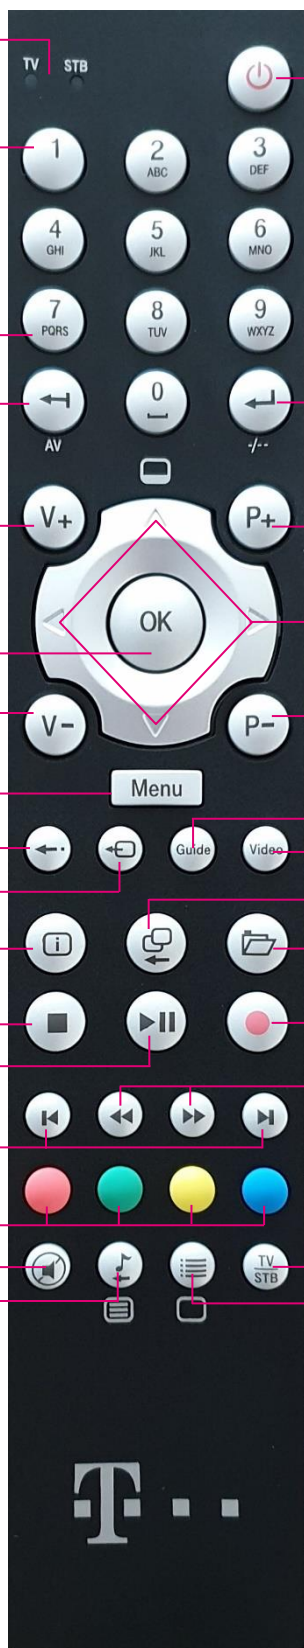

Taster za isključivanje televizora  
(ukoliko je programiran)



Uključi/isključi (indikator aktivnosti)



Tasteri za izbor kanala

 
 
 


Korak nazad/brisanje unijetih  
informacija



Podešavanje širine slike

Programski vodič



Informacije o programu  
Videoteka

Potvrda/unos odabranog



Listanje kanala

Pojačavanje/smanjivanje tona



Navigacioni tasteri

Ulazak u meni Extra TV uređaja



Izlazak iz menija

Korak nazad

Prečice do Extra TV opcija



Pusti/pauziraj

 


Premotavanje unaprijed i unazad

Stop




Premotavanje naprijed i nazad  
po 7 sekundi



Snimljene emisije  
Snimanje

 Podešavanje opcija gledanja



Teletext



Gašenje tona  
Vraćanje na prethodni kanal



