

UPUTSTVO ZA PODEŠAVANJE UREĐAJA ZA MOBILNI INTERNET

HUAWEI E5577C

Ukoliko je SIM kartica pravilno ubačena u uređaj, pokrenuće se automatsko podešavanje i moći ćete da se povežete na wireless mrežu koristeći podatke koji se nalaze na naljepnici ispod poklopca uređaja. Ime wireless mreže pronaći ćete u polju SSID (u konkretnom primjeru na slici to je WLAN-19LR30), a šifra je u polju WIFI KEY (u konkretnom primjeru 660igGN9Gq4HDif).



Ukoliko niste dobili automatsko podešavanje, uređaj je moguće podesiti i ručno. Nakon povezivanja uređaja USB kablom ili preko wireless-a, stranica za podešavanje automatski će se otvoriti nakon 30-ak sekundi. Ukoliko se to ne desi, uređaju možete pristupiti unošenjem adrese 192.168.8.1 u polje za adresu vašeg pretraživača. Nakon toga dobijate prozor za autorizaciju, kao na slici:

Log In

Password:


[Forgot password](#)

Language:

English

Log In Cancel

Unesite šifru koja se nalazi ispod baterije uređaja u polju *Password* (u konkretnom primjeru prikazanom na slici Obj94e34). Nakon unosa šifre potrebno je kliknuti *Log In*.

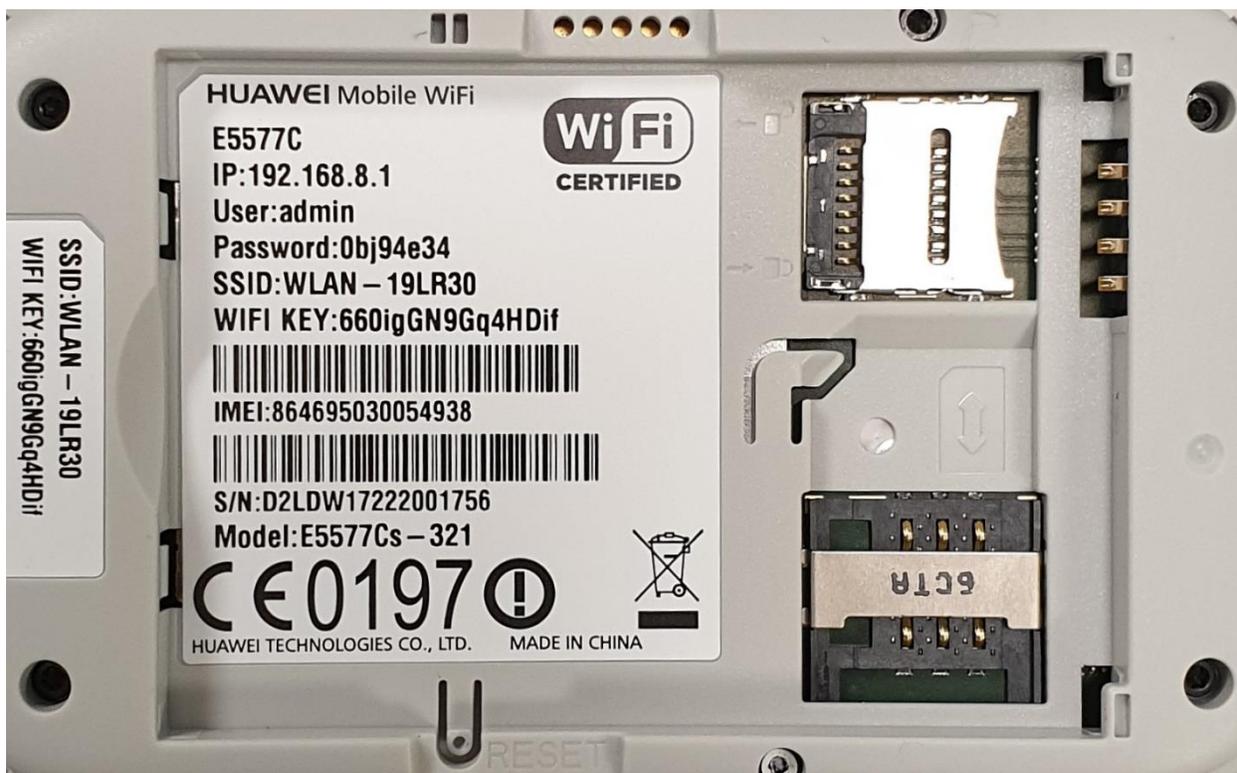

Nakon toga pojavljuje se PIN autorizacija kao na slici:

PIN Required

PIN code:

Remaining attempts: 3

 Remember my selection

For your convenience, it is recommended that you disable PIN verification; otherwise, you will have to enter the PIN each time your device is turned on.


Apply

Go to Home

[Huawei Privacy Policy](#) | [Huawei Privacy Notice](#) | [Open Source Notice](#)
(C) 2006-2018 HUAWEI TECHNOLOGIES CO., LTD.

Unesite PIN koji ste dobili s karticom. Nakon unošenja potvrdite sa *Apply*.

Dobićete panel za podešavanje gdje možete podesiti konekciju. Prvi korak je ponuda za ažuriranje uređaja, pa je preporučeno označiti ovu opciju i kliknuti na *Next*.

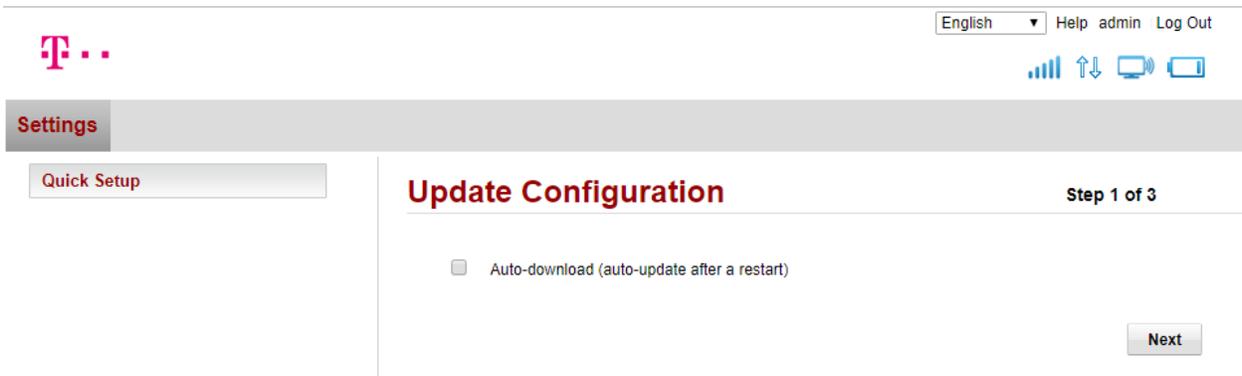

The screenshot shows the Huawei settings interface. At the top right, there is a language dropdown set to 'English', and links for 'Help', 'admin', and 'Log Out'. Below this are icons for signal strength, Wi-Fi, and battery. A 'Settings' header is visible on the left. Underneath, there is a 'Quick Setup' button. The main content area is titled 'Update Configuration' and is labeled 'Step 1 of 3'. It contains a checkbox for 'Auto-download (auto-update after a restart)' which is currently unchecked. A 'Next' button is located at the bottom right of the configuration area.

Nakon toga dolazimo do podešavanja wireless-a gdje sami birate ime mreže i šifru. U polje *SSID* unesite odabrano ime wireless-a (to može biti bilo šta, u našem primjeru na slici je *Wireless*) a u polje *WPA pre-shared key* unesite vašu šifru za wireless. Obavezno označite opciju *Modify Password*.



Settings

Quick Setup

Configure WLAN Settings

Step 2 of 3

Name SSID (Service Set Identifier): Enter a character string, of up to 32 characters in length, as the name for your wireless local area network (WLAN).

SSID:

WPA pre-shared key: Show password

Modify Password

Back

Next

Nakon što ste podesili željene parametre kliknite na *Next* i dolazite do koraka za podešavanje šifre za pristup uređaju (slika ispod). U polje *Current password* ukucajte šifru koja se nalazi ispod baterije uređaja, a u naredna dva polja deifinišite novu šifru za pristup; potvrdite sa *Finish*.

Password strength rules

Low password: password length is less than 6 characters and includes only one of the following: lowercase letters, uppercase letters, numbers, and symbols, or the password is the same as the user name or the user name spelled backwards.

General password: password length is from 6 to 10 characters and includes two combinations of any of the following: lowercase letters, uppercase letters, numbers, and symbols.

High password: password length is greater than 10 characters and includes two combinations of any of the following: lowercase letters, uppercase letters, numbers, and symbols.

Alternatively, the password length is greater than or equal to 6 and you must include three combinations of the preceding character requirements.

A strong password cannot contain repeated letters, numbers, or symbols for more than 1/3 of the total length. A general password cannot contain repeated letters, numbers, or symbols for more than 2/3 of the total length. For example, in "11aaa", two characters are repeated, therefore the repeat length is 5.

Current password:

New password:

Password strength: Low Middle High

Confirm password:

Back

Finish

Sačekajte dok na *Home* stranici ne dobijete stanje kao na slici: prikazuje se *Connected*, tj. da je veza uspostavljena.

The screenshot shows the Telekom.me mobile interface. At the top right, there is a language dropdown set to 'English', and links for 'Help admin' and 'Log Out'. Below this are icons for signal strength, Wi-Fi, and battery. A navigation bar contains 'Home', 'Statistics', 'SMS', 'Update', 'Settings', 'Sharing', and 'App Management'. The main content area features a bar chart with four green bars of increasing height, labeled '4G'. To the right, it says 'Telekom.me' and 'Connected', with a link to 'Connection Settings'. Below this are two buttons: a power button and a bidirectional arrow button. The bottom section is divided into three panels: 'Current connection' (Received/Sent: 248.73 KB / 188.76 KB, Duration: 00:05 HH:MM), 'WLAN status' (WLAN status: On, Current WLAN user: 0), and 'Sharing' (Click View SD Files to view the content on the SD card, with a 'View SD Files' button).