


UPUTSTVO ZA PODEŠAVANJE UREĐAJA ZA MOBILNI INTERNET

HUAWEI B311-221

Ukoliko je SIM kartica pravilno ubačena u uređaj, pokrenuće se automatsko podešavanje i moći ćete da se povežete na wireless mrežu koristeći podatke koji se nalaze na naljepnici sa donje strane uređaja. Ime wireless mreže pronaći ćete u polju Wi-Fi Name (u primjeru sa slike to je HUAWEI-B311-54E4), a šifra je u polju Wi-Fi Password (u konkretnom primjeru 4ED07DB49RN).

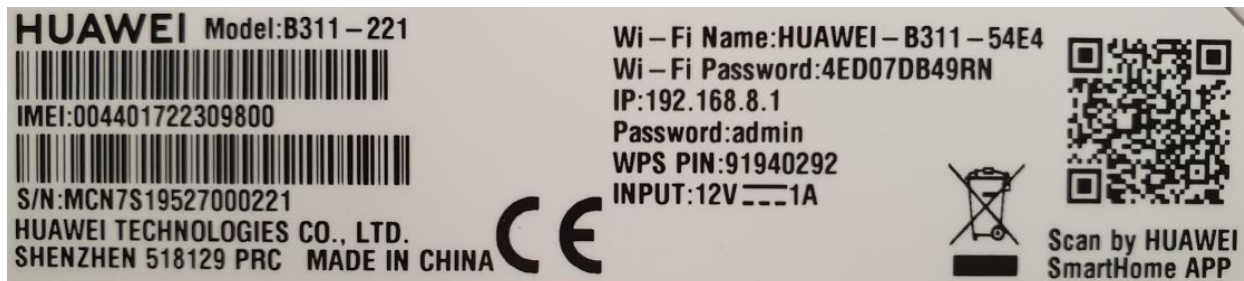

Ukoliko niste dobili automatsko podešavanje, uređaj je moguće podesiti i ručno. Nakon povezivanja uređaja mrežnim kablom ili preko wireless-a, stranica za podešavanje automatski će se otvoriti nakon 30-ak sekundi. Ukoliko se to ne desi, uređaju možete pristupiti unošenjem adrese 192.168.8.1 u polje za adresu vašeg pretraživača.

Nakon toga pojavljuje se PIN autorizacija kao na slici:

For your convenience, it is recommended that you disable PIN verification; otherwise, you will have to enter the PIN each time your device is turned on.

PIN required

PIN Code

Remaining attempts: 3

Disable PIN verification

[Save](#)

[Go to Home](#)

Unesite PIN koji ste dobili sa karticom. Da bi ubuduće izbjegli kucanje PIN-a prilikom uključivanja uređaja, ostavite odabranu opciju *Disable PIN verification* i kliknite na *Save*.

Nakon toga, biće vam tražena lozinka za pristup uređaju koja je podrazumjevano *admin*, unesite je u prazno polje i pritisnite *Log In*.



Router login password

Please enter your password



Check the label on your device for the password

Log In

Prikazaće se panel za pristup i podešavanje gdje možete podesiti konekciju. Potrebno da u polje za unos lozinke (password) unesete *admin*. Nakon unošenja lozinke, kliknite *Log In*.

Welcome to Mobile Broadband

Please enter your password



Check the label on your device for the password

Log In



Install Smart Home to
manage devices

Slijede osnovna podešavanja u nekoliko koraka...

Ovdje prolazimo kroz meni za brza podešavanja gdje se kao prva opcija nudi način ažuriranja. Kliknite na opciju *Enable And Continue*:

Auto update

When Auto update is enabled, the device will automatically update to the latest version between 3:00-5:00 AM when the device is idle. Updating will use some data. Enable?

Choosing to disable this feature may result in the following:

1. Missing the newly added features.
2. Less optimal user experience due to data not being updated properly.

You can access the Auto update setting again in Advanced > Updates.

Enable And Continue

Update Manually

U sljedećem koraku imamo podešavanje Wireless imena i lozinke. Ovdje ih možete promijeniti; kad ih definišete, pritisnite *Next*:

Set Wi-Fi name and Password

Wi-Fi name (SSID)

HUAWEI-B311-54E4

Wi-Fi password

.....



Next

Sljedeći korak je podešavanje lozinke za pristup uređaju gdje postoji mogućnost da bude ista kao za Wireless (odabirom opcije *Same as Wi-Fi password*) ili da se definiše nova (u polju *New Password*).

Nakon odabira, kliknite na *Finish*. Time smo završili podešavanje uređaja.

Set Router Login Password

Same as Wi-Fi password



New password



Must be at least 8 characters long. Combination of numbers and letters is recommended.

[Finish](#)

[Back](#)

Sačekajte nekoliko minuta prije nego što mobilne uređaje povežete na novu Wi-Fi mrežu.